



Booster Pump Setup


1. Carefully open the package removing each item. The package contains the following items. The main unit with a manifold containing four yoke assemblies, an instruction sheet, technical specifications, main supply hose with CGA 570 nipple (Black hose), three nipples tee assembly, vacuum pump assembly, vacuum pump hose (Clear hose) and two short high-pressure hose whips.

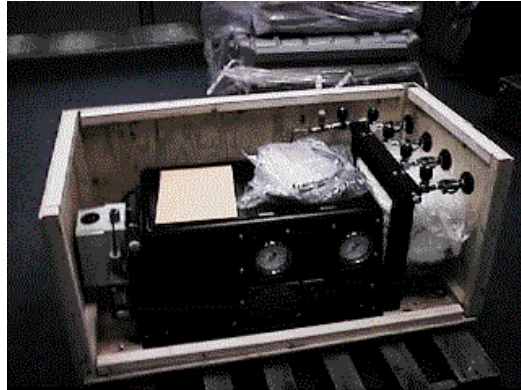

2. Place the booster pump on a secure surface.
3. Place the vacuum pump on a secure surface near the booster pump.
4. Connect the supply cylinder to the booster pump with the high-pressure main supply hose. Attach the CGA 570 connection to the supply cylinder. Attach the other end to the booster pump at the connection marked INLET.

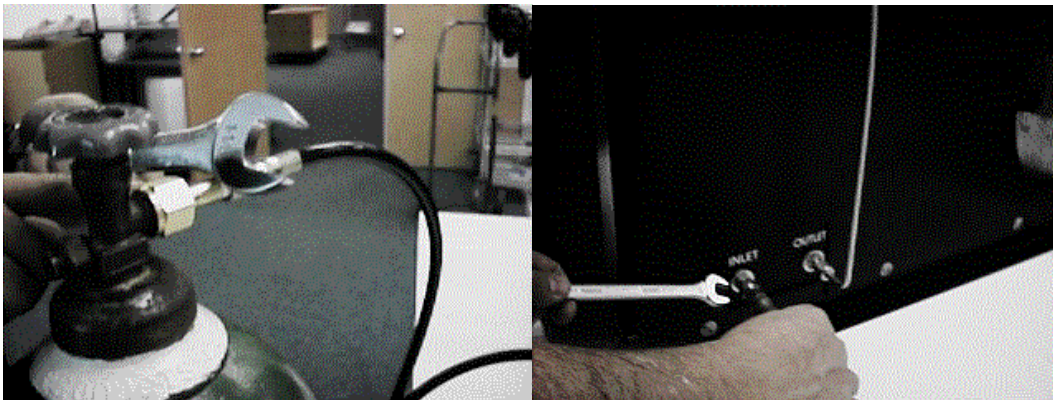

5. Connect the vacuum pump to the booster pump with the vacuum pump hose. Connect one end to the vacuum pump connect the other end to the manifold below isolation valve number four.

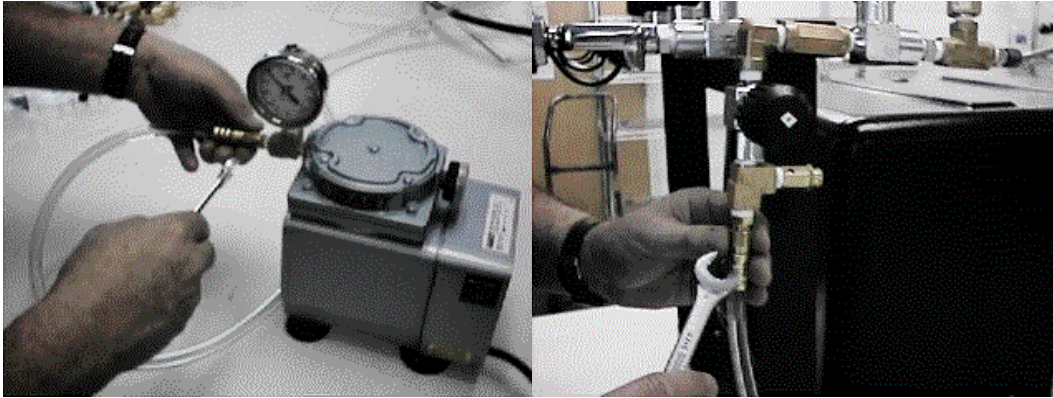

6. Plug in power cord to standard 110-volt outlet.
7. Refer to filling procedure for proper filling of BioPak 240 Cylinders.